

C+L Band ASE Broadband Light Source

The C+L Band ASE Broadband light source is an incoherent light source, which is the spontaneous radiation generated by the semiconductor laser pumped erbium-doped quartz fiber, and the spectral planarization technology is introduced to achieve the broadband flat spectrum. The wavelength of the light source covers the C+L band, the spectral flatness is better than 3dB, and it is suitable for applications such as fiber sensing through single-mode fiber or bias-preserving fiber output.

Characteristics


- Flattened Optical Spectrum
- Easy Operation
- Excellent Stability of Power

Applications

- Fiber Sensing
- Medical Imaging
- Test and Measurement



Desktop Model

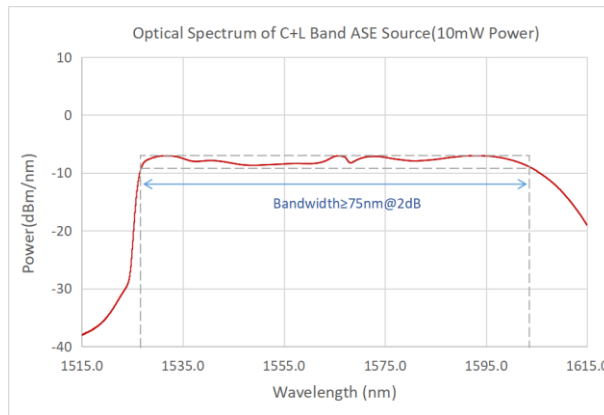

Optical Parameters	Unit	Typical Value	Remarks
Wavelength Range	nm	1528~1603	≥75nm@3dB, C+L band
Total Output Power	mW	10/20/50/100	
Power Turning Range	-	10%~100%	*Optional
Spectral Flatness	dB	≤3	*
Output Isolation	dB	>35	
Power Instability(15min.)	dB	≤ ±0.02	≤±0.5%
Power Instability(8hr)	dB	≤ ±0.05	≤±1.2%
Degree of Polarization	dB	≤ 0.2	
Optical Fiber	-	SMF-28/PM1550	
Fiber connector	-	FC/APC	

*Flatness≤2dB@10/20mW and Flatness≤6dB@200mW is also available upon request

General Parameters	Desktop	Module
Control Function	Keystroke	RS232 serial Communication
Remote control Port	Optional	DB9 Female
Power Supply	AC100~240V, <30W	DC5V, <15W
Dimensions	260(W)×280(D)×120(H)mm	125(W)×150(D)×20(H)mm
Operation Temperature	-5~+35°C	
Operation Humidity	0~70%	



Ordering Information/ Product Code					
ASE	Wavelength	Output Power(mW)	*Power Tunable	Fiber	Packaging
	CL=C+L band	10/20/50/100/200	*T (optional)	SM=SMF-28 PM=PM1550	M - Module B - Desktop

Singapore Main Office
Telephone: +65 6996 0391
Email: info@simtrum.com

China Main Office
Telephone: +86 15000853620
Email: sales@simtrum.cn


www.simtrum.com